


Approval Number

**e13** 92R-01 ????? TYPE 1026

Pos	Qty	Part No.	Description	Ordernumber
1	1	900116	Muffler DuneFox Stainless Steel	<b>BM09F01-DUCS - Carbon Steel</b>
	1	900117	Muffler DuneFox Shot Blasted	<b>BM09F01-DUSB - Shot Blasted</b>
	1	900118	Muffler DuneFox Black Coated	<b>BM09F01-DUBL - Black Coated</b>
		<b>850044</b>	<b>Mounting Parts:</b>	<b>Weight:</b>
2	1	750031	Link Pipe	<b>Stock: 4,6 kg</b>
				<b>Bos: 2,9 kg</b>
3	1	700058	Mounting Bracket #1	<b>Noiselevel: @ 3750 rpm</b>
4	1	700059	Mounting Bracket #2	<b>Stock: Specified 89,0 dB(A)</b>
5	4	14148	Bolt M6x16 flange Torx	<b>Measured 87,0 dB(A)</b>
6	1	64779	Washer 9 mm.	<b>Bos: Measured 87,5 dB(A)</b>
7	1	Original	Rubber	
8	1	Original	Washer	
9	1	Original	Bolt M8	
10	2	300022	Pull Spring 25 mm.	
11	1	64653	Clamp 53	

**Extra Parts: Heatshield Kit BM09F01 - HSMP sold Separately**

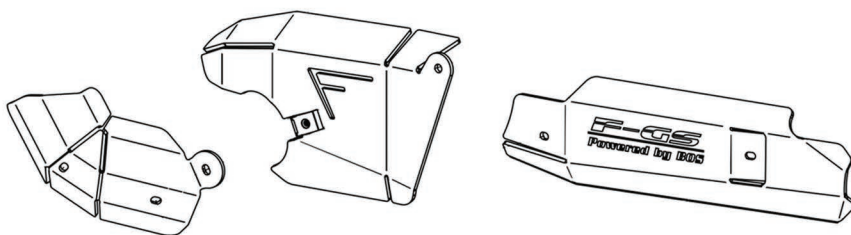

### Performance

Stock: ???,? Hp / ??? rpm  
 Bos: ???,? Hp / ??? rpm  
 Max. Hp incr.: + ??,? Hp / ??? rpm  
 Max Nm incr.: + ??,? Nm / ??? rpm

### Tips

In order to avoid smudges and fingerprints burning into the surface it is imperative to clean the exhaust before starting the engine, burnt in stains are very difficult to remove.  
 After 300 miles or 500 kms. check all nuts and bolts and retighten if necessary.