


| Pos | Qty | Part No.      | Description            | Ordernumber                     |
|-----|-----|---------------|------------------------|---------------------------------|
|     |     | <b>850045</b> | <b>Heat Shield Kit</b> | <b>BM09F01-HSMP - Alu Black</b> |
| 1   | 1   | 700060        | Heatshield Fronttube   |                                 |
| 2   | 1   | 700061        | Heatshield Mufflerbox  |                                 |
| 3   | 1   | 700062        | Heatshield Adapter     |                                 |
| 4   | 5   | 300054        | Bolt M5x12 Torx        |                                 |
| 5   | 1   | 300055        | Bolt M6x50 Full thread |                                 |
| 6   | 1   | 14045         | Washer M6              |                                 |
| 7   | 1   | 14036         | Lock Nut M6            |                                 |
| 8   | 1   | 14111         | Speednut M5            |                                 |

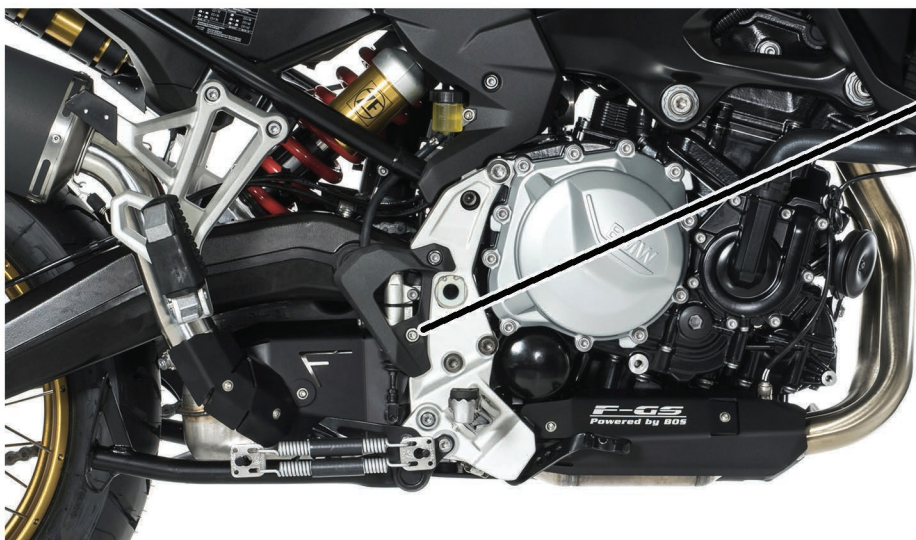

Replace original bolt by Pos.5 Bolt M6x50

In order to avoid smudges and fingerprints burning into the surface it is imperative to clean the exhaust before starting the engine, burnt in stains are very difficult to remove.  
After 300 miles or 500 kms. check all nuts and bolts and retighten if necessary.